

Installation Instructions

For 3' x 6' Aluminum & Steel Screens

Screen Frame

Contents: 2x Frame, 16x 3/4" Screw Contents: 1x Post, 1x Post Cap, 1x Post Base Cover, 4x Concrete Anchor

Post

AWARNING

No representation or warranty is given that your particular application of these products complies with relevant building codes. Therefore consult with professionals and local building officials before beginning work: (i) to ensure compliance with relevant building codes for your application; (ii) to identify appropriate safety gear that is to be used during installation such as a safety harness when working above ground; (iii) to ensure that the work area is free from utilities, services and hazards; and, (iv) to clarify any instructions or warnings that may not be clear. It is the responsibility of the installer to evaluate the conditions and determine the appropriate hardware and procedure. Failure to do so could result in personal injury, damage to the product, or other damage. Work in a safe manner wearing protective gear such as gloves, eyewear, headwear, footwear and clothing. When using tools always comply with operation manuals and instructions. Metal and other materials may have sharp edges and could fragment or splinter during or as a result of handling or cutting. Do not use these products in connection with any substance that is or may be harmful or corrosive to the products. Inspect and maintain these products on a regular basis.


No member of The Peak Group of Companies (as defined at www.peakproducts.com) shall be liable for any loss or damage resulting from the improper installation or use of this product. In the unlikely event that any member of The Peak Group of Companies becomes liable for any loss or damage, the aggregate liability shall be limited to the retail purchase price of the product.

Peak® products and the materials associated therewith are protected by patents, designs, copyright and/or trademarks. All trademarks are used under license from Peak Innovations Inc. May be subject to patent(s) or patent(s) pending.


Tools and Materials Needed

Drill Hammer drill 1/8" Drill bit for metal Hammer Tape measure

Driver bits 5/16" Drill bit for concrete 7/16" Wrench Level

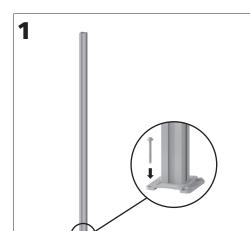


Position first post. For concrete attachment, use hammer drill with 5/16" masonry bit to drill four holes 3" deep through each corner of post base. Clean holes. Use hammer to insert assembled concrete anchors (provided) until washer is touching post base. Use 7/16" wrench to tighten nuts. Ensure post is plumb.

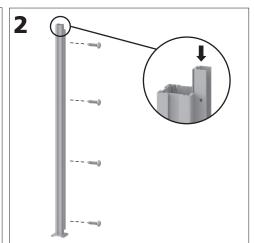


Slide first frame into slot on post and position at desired height. Ensure bottom of frame is at least 1" above top of post base. Drill four 1/8" holes through frame and into post at provided locations. Fasten frame to post with four 3/4" screws (provided).

Ensure holes on edge of frame are on desired side.

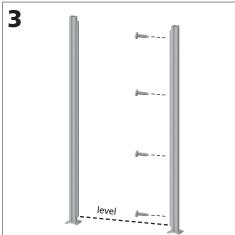


Position second post (do not secure it yet), then repeat Step 2.


Ensure holes on edge of frame are on desired side.

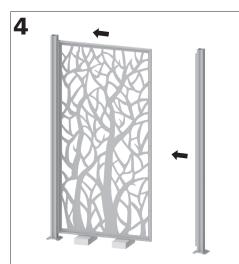

Insert Decorative Screen into frame on first post and use wood blocks to level Decorative Screen at desired height. Then move second post and frame into position to engage with other side of Decorative Screen.

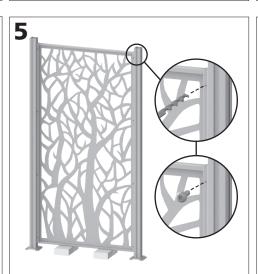

For each frame, drill four 1/8" holes through frame and into screen at provided locations. Fasten Decorative Screen to both frames using eight 3/4" screws (provided).

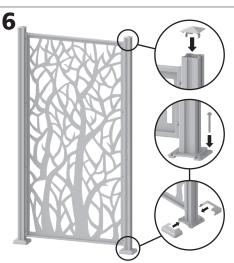

Fasten second post in place (see Step 1 for full details). Install post caps and post base covers.