



# PEAK® Post Holder - Installation Instructions




**1. Pour and level concrete.**

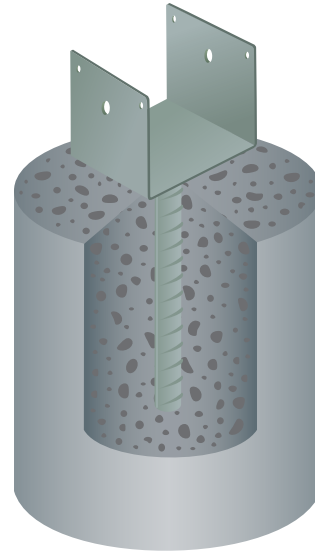

**2. Insert post holder into concrete and level post holder.**

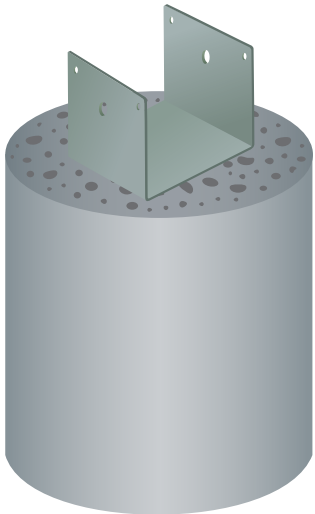

**3. Smooth concrete around post holder. IMPORTANT: allow concrete to cure before installing post.**

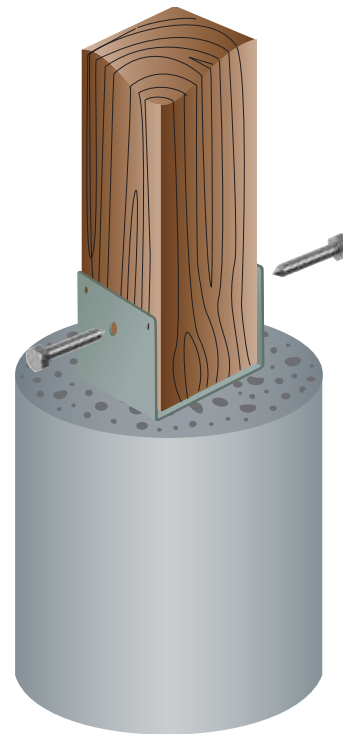

**4. Insert post into post holder and attach with 2 lag screws.**

**⚠ WARNING** Always comply with all applicable building codes. Before using this product, ensure foundation is suitable. Not suitable for all applications or any commercial use. Do not overload. Always wear protective attire and eyewear. \*Only use fasteners suitable for your application.

No member of The Peak Group of Companies (as defined at [www.peakproducts.com](http://www.peakproducts.com)) shall be liable for any loss or damage resulting from the improper installation or use of this product. In the unlikely event that any member of The Peak Group of Companies becomes liable for any loss or damage, the aggregate liability shall be limited to the retail purchase price of the product.

Peak® products and the materials associated therewith are protected by patents, designs, copyright and/or trademarks. All trademarks are used under license from Peak Innovations Inc. May be subject to patent(s) or patent(s) pending.